


INSTALLATION INSTRUCTIONS


1. Remove the strings of your Strat.
2. Unscrew all fastening screws of the pickguard.
3. Take off the pickguard, turn it and place it on top of the body of your Strat.




4. Now remove the middle connection of the volume pot and connect this cable to the yellow cable of the S.R.Visionizer. To insulate the solder joint, a piece of heat shrink tubing is included with the installation kit.

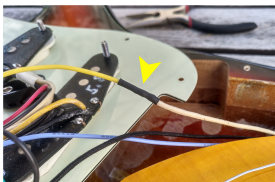

5. Solder the green cable of the S.R.Visionizer to the free, middle lug of the volume pot.
6. Solder the black cable of the S.R.Visionizer to the volume pot housing.

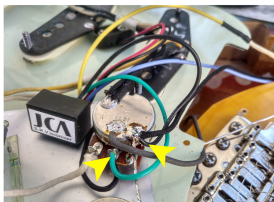

7. Unscrew the two screws from the output plate of your Strat and remove the old mono jack.
8. Pull the blue, long cable of the S.R.Visionizer through the cable channel to the output jack and solder it to the right connection of the stereo jack (photo). Now solder the ground and output of the original cable to the new socket. Finished!

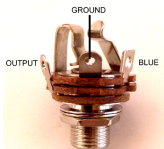

Where to place the 9V battery? There is enough space in your Strat for this. The best solution is the space between the pots and the PU switch. The small housing of the S.R.Visionizer can be placed very easily (see photo).



Enjoy the new sound of your Strat!